

Important information

Important information leaflet

Before you use your device, please read the *Important information* leaflet provided in the Setup guide in your device or in the box.

To access the setup guide manually

- 1 From the **Home screen**, tap .
- 2 Tap **Settings** > **Setup guide**.

Limitations to services and features

- ! Some of the services and features described in this user guide are not supported in all countries/regions or by all networks and/or service providers in all areas. Without limitation, this applies to the GSM International Emergency Number, 112. Please contact your network operator or service provider to determine availability of any specific service or feature and whether additional access or usage fees apply.

Use of certain features and applications described in this guide may require access to the Internet. You may incur data connection charges when you connect to the Internet from your phone. Contact your wireless service provider for more information.

Water resistance

In order for your device to be water resistant, the covers for the micro USB port, the micro SD card, the micro SIM card and the headset connector must be firmly closed.

Avoid exposing your device to environments with excessive dust or moisture. Normal wear and tear along with damage to your device can reduce its ability to resist dust or moisture. Do not use your device in the following conditions:



Ocean water



Swimming pool



Diving



Hot water



Sand/mud



Other liquid
chemicals

Never submerge the device, the micro USB port, the micro SD card, the micro SIM card or the headset connector in water, expose the device to any liquid chemicals, or expose your device to moist environments with extreme high or low temperatures. If water or liquid gets on the micro USB port, the micro SD card, the micro SIM card and the headset connector, wipe it off with a dry cloth. The water resistance of the micro USB port, the micro SD card, the micro SIM card and the headset connector is not guaranteed in all environments or conditions.

If water gets on the speaker, dry the speaker for approximately three hours before using it again.

All compatible accessories, including batteries, chargers, handsfree devices, micro USB cables, micro SIM cards and microSD™ cards are not dust and water resistant on their own.

Your warranty does not cover damage or defects caused by abuse or improper use of your device. If you have any further questions about the use of your products, refer to our Customer support service for help.

IP (Ingress Protection) rating

Your device has an IP rating, which means it has undergone certified tests to measure its resistance levels to both dust and water. The first digit in the two-digit IP rating indicates the level of protection against solid objects, including dust. The second digit indicates how resistant the device is to water. The higher the numbers, the higher the respective protection.

The IP ratings of your device are IPX5, IPX7, and IP5X. This means that your device is dust protected and is protected against the effects of immersion and low pressure water stream. So you can use the device in extreme weather conditions, for example, when it's snowing or raining, or when humidity levels are high. You can also use the device in dusty or sandy environments, and when your fingers are wet. See the table for more details.

Resistance to solid objects and dust	Resistance to water
IP0X. No special protection	IPX0. No special protection
IP1X. Protected against solid objects > 50 mm in diameter	IPX1. Protected against dripping water
IP2X. Protected against solid objects > 12.5 mm in diameter	IPX2. Protected against dripping water when tilted up to 15 degrees from normal position
IP3X. Protected against solid objects > 2.5 mm in diameter	IPX3. Protected against spraying water
IP4X. Protected against solid objects > 1 mm in diameter	IPX4. Protected against splashing water
IP5X. Protected against dust; limited ingress (no harmful deposit)	IPX5. Protected against water jet spray
IP6X. Dust tight	IPX6. Protected against heavy jet spray
	IPX7. Protected against the effects of immersion
	IPX8. Protected against submersion

Legal information

Sony C6603/C6602

This User guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

©Sony Mobile Communications AB, 2012.

All rights reserved.

Publication number: **1273-1765.2**

Your mobile device has the capability to download, store, and forward additional content, for example, ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony, are entirely responsible for additional content that you download to or forward from your mobile device. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony does not guarantee the accuracy, integrity, or quality of any additional content or any other third-party content. Under no circumstances will Sony be liable in any way for your improper use of additional content or other third-party content.

This User guide may reference services or applications provided by third parties. Use of such programming or services may require separate registration with the third-party provider and may be subject to additional terms of use. For applications accessed on or through a third-party website, please review such websites' terms of use and applicable privacy policy in advance. Sony does not warrant or guarantee the availability or performance of any third-party websites or offered services.

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration purposes only and may not accurately depict the actual device.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the

WM DRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WM DRM to play or copy protected content. Revocation does not affect unprotected content. When you download licenses for protected content, you agree that Microsoft may include a revocation list with the licenses. Content owners may require you to upgrade WM DRM to access their content. If you decline an upgrade, you will not be able to access content that requires the upgrade.

This product is licensed under the MPEG-4 visual and AVC patent portfolio licenses for the personal and non-commercial use of a consumer for (i) encoding video in compliance with the MPEG-4 visual standard ("MPEG-4 video") or the AVC standard ("AVC video") and/or (ii) decoding MPEG-4 or AVC video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed by MPEG LA to provide MPEG-4 and/or AVC video. No license is granted or shall be implied for any other use. Additional information including that relating to promotional, internal and commercial uses and licensing may be obtained from MPEG LA, L.L.C. See <http://www.mpegla.com>. MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

This smart phone should only be connected to CTIA certified adapters.

Index

A	
accounts	11
Exchange Active Sync®	11
Facebook™	11
Google™	11
adjusting volume	58
Airplane mode	31
alarm	112
Album	79, 80
map	84
My albums	81
online albums	85
opening	79
pictures	80
SensMe™ slideshow	82
thumbnail size	80
viewing	80, 81, 84, 85
viewing local content	79
viewing online photos	86
Android™	7
animated wallpaper	20
answering service	41
applications	
arranging	22
overview	123
screen	20
sorting	22
audio	61
adjusting volume	58
playing	58
playing tracks in random order	61
audio content	
related content	59
B	
backing up	
contacts	49, 116
content	116
battery	12
Bluetooth™ wireless technology	100
BRAVIA® Engine	79
brightness	30
business cards	
sending	48
C	
calendar	112
create an event	112
calls	39, 43
barring	42
diverting	42, 43
emergency	39
forwarding	43
log	40
missed	40
multiple	41
reject	42
settings	42
waiting	41
camera	69, 71, 75, 76
.....	69
closing	69
face detection	70
geotagging	71
icons	76
overview	69
recording videos	75
screen	69
self-portraits	70
settings	71, 75, 76
smile detection	71
smile shutter	71
taking photos	69, 70, 71
using the flash	70
video	75
viewing photos	70
viewing videos	75
zoom	70
caps lock	24
charging	12
chat	52
conference calls	41
connecting	92
connectivity	92
contacts	44
backing up	49
copying	49
favorite	48
groups	48
importing from SIM card	45
joining contact information	47
picture	47
sending	48
sharing	48
transferring	45
corporate email, calendar, and contacts	108
cropping	
photos	82
D	
data traffic	34
date	
format	29
deleting	58
an alarm	112
music	64
photos	83
tracks	58
videos	83
device	
battery	13
performance	13
update	115
download	
Internet settings	33
driving directions	111
E	
e-mail	53
editing	
photos	82
email	53
more than one account	53
emergency numbers	39
equalizer	58
events	
calendar	112
extensions	18
F	
face detection	70
Facebook™	
synchronization	108
Xperia™ with Facebook	108

favorites	
removing radio channels as	67
saving radio channels as	67
fixed dialing	43
flash	
using when taking photos	70
Flight mode - See Airplane mode	31
FM radio	
favorites	67
selecting a channel	66
Friends' music	61
front camera	69
G	
geotagging	
of photos	71
gesture input	26
Gmail™	53
Google Latitude™	111
Google Maps™	111
Google Play™	37
Google Talk™	52
Google™ account setup	54
Google™ synchronization	107
GPS	110
H	
headset	32
using	33
Home screen	18
customizing	19
I	
icons	122, 123
in the camera	76
importing SIM contacts	45
improving photos with Mobile BRAVIA® Engine	79
infinite key	59
instant messaging	52
Internet	
settings	33
web browser	91
K	
keyboard	24
settings	28
keys	12
L	
language	31
writing	28
Latitude	111
LCD backlight control	30
"Like" a photo on Facebook™	86
"Like" a track on Facebook™	59
"Like" a video on Facebook™	86
live wallpaper	20
location	71, 110
locations	110
locks	
activating the screen	10
locking the screen	10
screen lock	10
M	
maintenance	115
maps	110
Maps	111
marking options	15
messages	
settings	33
MHL(Mobile High-Definition Link)	104
Microsoft® Exchange synchronization	108
Mobile BRAVIA® Engine	79
movies	87
clearing video information	88
Movies	87
Multimedia Messaging Service (MMS)	
settings	33
music	32, 57, 62
adjusting volume	58
changing tracks	58
deleting	64
downloading music information	60
hearing protection	62
My playlists	62
pausing a track	58
playing	58
purchasing	63
recommending	64
searching using TrackID™	63
sending	59
sharing	63
shortcuts	60
transferring to your device	57
transferring to/from a computer	57
using a headset	33
viewing artist info	63
Visualizer	59
music services	63
Music Unlimited™	64
My music	60
N	
Navigation application	111
notification	123
light	22
panel	23, 24
ringtone	30
setting	24
O	
on-screen keyboard	24
overview	60
P	
pausing a track	58
personal information	44
phone maintenance	115
phonebook	44
Phonepad	24, 27
photo albums	
viewing	79
photos	83
adding a geotag	83
adding the geographical position	71
associating with a contact	47
cropping	82
deleting	83
editing	82
photo viewer	80
rotating	82
selecting	80
SensMe™ slideshow	82
sharing	83
slideshow	82
taking	69, 70, 71
transferring to/from a computer	57
using as	82
viewing	70, 79, 80
viewing on a map	84
viewing same location	71
zooming	82
PIN	117, 118

playing	
music	58
playlists	61
adding a track	61
creating	61
deleting	62
playing your own	62
removing tracks	62
powering off	10
powering on	10
presets	
removing radio channels as	67
saving radio channels as	67
protective plastic sheet	15
PUK	117, 118
purchasing	
music	63
R	
radio	66
favorites	67
listening to with the speaker	67
mono sound	67
moving between channels	66
opening	66
radio region	66
searching for channels	67
selecting a channel	66
stereo sound	67
visualizer	66
radio sound	67
receiving items using Bluetooth™	101
recently used applications window	21
recommending music	59, 64
recommending photos and videos	86
recording videos	69
recycling your phone	120
resizing	
photos	82
ringtone	112
rotating	
photos	82
S	
scanning barcodes	105
screen	30
cracked	15
glass	15
screen unlock pattern	117
warranty	15
screen mirroring	104
searching	
music using TrackID™	63
track information	63
self-portrait	69
sending	
business cards	48
contacts	48
music	59
sending items using Bluetooth™	101
SensMe™ channels	61
services	11
settings	
call	42
camera	71, 75
data usage	34
Internet	33
messaging	33
MMS	33
quick settings	22
still camera	71
video camera	75
setup guide	11
sharing	
music	63
photos	83
shuffle music	61
silent mode	29
SIM card	117, 118
exporting contacts to	49
importing contacts from	45
slideshow	82
Smart Connect	105
smile detection	71
smile shutter	71
SOS - See emergency numbers	39
STAMINA mode	
changing settings	14
standby time	
estimating	14
status	122
bar	22
still camera	69, 71
settings	71
support	115
Support application	120
surround sound feature	58
symbols	24
synchronizing	107
Facebook™ contacts, calendar, photos	108
Google™ contacts, calendar, email	107
with Microsoft® Exchange	108
T	
taking photos	69
by tapping	70
self-portraits	70
using face detection	70
using smile detection	71
using smile shutter	71
telephony - See calls	39
text input method	24
themes	20
time	29
time management	112
TrackID™ technology	63
buying a track	63
deleting a track	64
opening	63
recommending a track	64
searching for track information	63
sharing a track	63
using results	63
using with the FM Radio	68
viewing artist info	63
viewing charts	63
transferring	
contacts	45
turning off	10
turning on	10
U	
updating device	115
usage info	34
USB connection	102
using movies	87
using the equalizer	58
V	
vibration	30, 112
video albums	
viewing	79

video camera	69, 75, 76
recording videos	75
settings	75, 76
Video Unlimited™	89
buying videos	89
creating an account	89
menu overview	89, 90
notifications	89
renting videos	89
watching a video	90
videos	83
adjusting volume	83
deleting	83
fast forwarding and rewinding	83
pausing	83
playing	83
recording	75
selecting	80
sending	83
sharing	83
transferring to/from a computer	57
viewing	75, 79, 80
viewing	
movies	87
photos	70
videos recorded using the camera	75
voice input	28
voice recognition	28
voicemail	41
volume	
adjusting for videos	83
key	29
W	
"WALKMAN" application	
adding tracks to playlists	61
creating playlists	61
deleting tracks	58
minimizing	58
overview	57
playing tracks in random order	61
playlists	61
using	58
using the equalizer	58
"WALKMAN" application widget	62
wallpaper	20
web browser	91
widgets	19
resizing	19
wireless networks	110
Z	
zoom	70
zooming	
photos	82