

LEAGOO/C1

User Manual

Contents

1 For your safety	1
2 Start to use.....	2
3 Basic Features	4
4 Contacts.....	7
5 My File.....	7
6 Call History	7
7 Multimedia	8
8 Messaging	10
9 Profiles	11
10 Camera	12
11 Torch.....	12
12 Bluetooth.....	12
13 Settings.....	13
14 Organizer.....	14
15 Fun&Games	15
16 USB funcyion.....	15
17 Appendixes.....	15

1 For your safety

Notice: To use your mobile phone safely and efficiently, please read the following instruction carefully before using and abide by it.



Be careful when you are driving.

Please abide by the relative local laws and regulations. Use both of your hands to drive! Put the mobile phone in its seat to avoid falling down. The ballonet will charge quickly when it is in danger, please don't put anything in its security scope, including fixed phone and handset equipment. Otherwise it may cause serious body injuries.



The handset must be turned off when you are on the plane.

The interference of mobile will influence the flight. It is illegal to use mobile on phone, please power it off.



The handset must be turned off when you are in blowing-up area.

When you are at a blowing-up area or near it, please abide by the relevant laws and power your mobile off.



The handset must be turned off when you are near a danger product.

Please do not use mobile when you are near gas station or chemical plant.



The handset must be turned off when you are in a hospital.

You have to abide by the relevant regulations of hospital and turn your handset off when you are near medical equipment. Any wireless transmission device, including mobile, will interfere those equipment not fully-protected.



Interference

All the mobile handset may be interfered by the radio and reduce the performance of the handset.



Professional service

Only the professional can setup or maintain the handset. Improper installation or maintenance would bring out great danger, it also disobey regulations of maintenance guarantee.



Accessory and battery

Only the appointed accessory and battery can be used. It is suggested that you return the used battery to the factory or put it in the appointed recycle zone. Do not put it together with other rubbish or discard it.



Reasonable use

Please use the handset in reasonable way. It is prohibited to put your handset in high temperature (over 60°C), such as beside the window where there is sunshine. Please use wet or antistatic cloth to clean the handset. Do not use dry or static cloth to clean it. Your handset is not waterproof, please keep it dry.



Emergency call

Please make sure the handset is powered on so that it can dial the emergency call. In idle mode, the handset can dial emergency numbers, such as 112, 100, 101 and 102. Press dial key to dial it, report your location and the situation briefly. Do not end the call without permission.



Note: this handset, like any other one, may not support all the features because of the network coverage and wireless transmission. Some network even can not support 112. So do not rely totally on your handset about some significant calling (like medical aid). Please refer to the local operator.

2 Start to use

Please read the following section carefully before using the handset. It will instruct you how to insert and unlock the SIM card, how to setup and maintain the handset, how to charge the battery, and also the information about digital GSM network.

2.1 Battery installation

Please charge the battery after it has been completely used up, and use it after it has been completely charged. Three times later, the battery will be in best status.

2.1.1 Installing and discharging of the battery

Pull the cover to take out the battery, and put it inside then close the cover to install it.

2.1.2 Charge of the battery

- connect the charger with power supply
- connect the charge with handset
- The battery indication on LCD will bicker. If the handset is powered off when charging, LCD will display “charging”. If you overuse the handset when it is out of battery, LCD will display “charging” a while after you begin to charge it.

- When the battery indication is full and stops bickering, it means the handset has been completely charged. If the handset is charged when power off, the indication will also be displayed on LCD. It will take 2 to 3 hours to charge, the battery, the handset and the charger will get warm during the charging time.
- Please disconnect the jacket and charger after finishing charging.
- The handset can be normally used when it is charging.

Warning: the handset must be put in a ventilated place where the temperature is -40°C — $+55^{\circ}\text{C}$. And you must use the charger supplied by the factory. It is dangerous not to use the appointed charger, and it will break the guarantee terms of the handset.

2.1.3 Use of the battery

When the handset is powered off automatically or when there is low battery indication, you should charge it in time. If the battery is not run out of energy before charging, the handset will adjust and reduce the time of charging.

The idle time and talk time of the handset specified by the factory is based on the perfect working environment. Actually, the working time of the battery will vary with the network status, work environment and the way of usage.

2.2 Connecting to network

2.2.1 SIM card

The phone supports two SIM cards which can be in use at the same time when power on. Your network provider will supply you two inserted SIM cards. SIM card is the key for you to enter the digital GSM network. Please insert the useful SIM card before using the phone. Two SIM cards can be inserted into the phone at one time and switched to your wanted one at power-on such as dual SIM open, only one SIM open.

All information about the network connecting and your calling record will be saved in the SIM card, and also the list of your phonebook and messages. You can take it out and insert to any other GSM handset.

You should avoid touching the metal area of the card, and put it far away from the magnetic area. Once it is damaged, you cannot enter the GSM network.

2.2.2 Insert and take out the SIM card

Normally, SIM is put in a card ; please take it out carefully before installing.

Power off the handset, discharge the battery or other power supply.

Insert the card, the metal face being downward.

When you need to take out the card, please turn off the handset and discharge the battery first.

Warning: forbid to take out the SIM card when the handset is powered on. It is definitely prohibitive to insert or take out SIM card when the handset is connected to external power supply, or SIM card may be damaged.

2.2.3 Lock SIM card

To avoid the illegal use, the handset is protected by PIN code. Once choosing this function, you have to input the PIN code when you turn on the handset. You can unlock SIM in this way and then receive or make a call. The user can clear the SIM protection, after which it cannot protect it again unauthorized usage. After power it on, you can input PIN code, during which you can clear it if there is mistake. If you input the wrong code continuously for 3 times, the SIM card will be locked by the network, and you will be asked to input the PUK code.

Note: the network supplier will appoint a standard PIN code for the handset, and you should change it to your personal code as soon as possible.

2.2.4 Lock the phone

To avoid the illegal use, you can set password for the handset. After choosing this function, you have to input the password every time after you input the PIN code. Only in this way you can unlock the handset and use it. The user can delete the password, after which it cannot prevent unauthorized use.

Input the password, you can clear it when there is mistake. Once you forget the password, you have to contact the retailer or the maintenance center.

2.2.5 Connecting to network

After unlocking the SIM card, the handset will search the registered network or other available network. Once connected, the name of network supplier will show in the middle of the LCD. At this time, your handset is in idle mode.

Note: if it prompts “emergency call only” on LCD, it means you are out of service. But you can still make emergency calls according to the signal strength.

3 Basic Features

3.1 Making Calls

Once the mark of the network provider appears on the screen, you can make or answer a call. The signal bar on the upper left corner of the screen shows the strength of your phone's connection to the network. The appearance of four bars indicates the strongest signal.

The performance, which can be affected by barriers, may be improved from moving within a small range.

3.1.1 Making call

Enter telephone number-by-number keys. Press the Call key to make a call. To change a phone number, press the right soft key to clear the number. During dialing, a corresponding animation displays on the screen. Once the other party answers, the screen displays the call status. If the number does not belong to the Phone Book List, the screen of your device only displays the other party's number. Otherwise, the name would be displayed. If the number is saved by your phone, its type (Mobile phone/Home Number/Office Number, i.e.), email, caller picture, and caller group also display on the screen.

3.1.2 Dialing an extension number

For extension number, you have to dial the telephone exchange; then, press * Key to switch in a row until "P" shows on the screen. Now you can call an extension.

Allow you to follow the sequence below to call can extension: Area code, telephone exchange, extension number, and Call key.

3.1.3 Making IDD

Press * key and release it to enter the character "+" which replaces the international access code. This allows you to make a call towards any country without knowing the local international access code, for instance, it is "00" in China.

Allow you to follow the sequence below to make an international call: "+", country code, whole telephone number, and Call key.

After inputting the access code, enter your required country code and the complete telephone number. Omit "0" in front of a city code while dialing the number just as you dial the international call.

3.1.4 Dialing the number in the list

All calls you have made or received are saved in the list of Call History. The recently dialed, received, and un-answered numbers are grouped as Calls Dialed, Calls Received, and Calls Un-answered. When the list is full, old numbers will be deleted automatically. To view the list for the following key operations:

Press the Call key in standby mode to view all call logs.

Allow you to press Call key to dial any number in the list directly.

When a number list appears, press Ok to view details. Then, press Option to select an operation like saving the number or delete the number.

3.2 Making an emergency call

As long as the network service is available, which can be checked via viewing the signal strength bar at the bottom left corner of the screen, you can make an emergency call. If your network provider does not provide roaming service in the area, you can make emergency calls only. If you are located in a service area of the network, emergency calls can also be made without an SIM card.

3.3 Answering a call

Press the “Call” key or “Answer” key to answer an incoming call. If an earphone is installed, you can use the key on the earphone to receive a call. For inconveniences, enable the auto answer mode and confirm that the earphone has been installed. Then, your phone will automatically answer an incoming call after the ring or vibration. If “Any Key” in the Answer Mode menu is selected, you can press any key in addition to the End key to receive a call.

3.4 Call options

During a call, press “Option” to access the call options or “H-free” to activate Speaker function. To turn off the loud speaker, press the same key. For the operations of call options, refer to that of the function menu.

This feature is only available during a call. Besides, other functions like call waiting and call holding require the support of the network. Please contact your network supplier.

In the Option, you can select the functions.

Hold : To pause the current call.

End single call : To end the current call.

Phone Book : To access the phonebook menu.

Call history : To access call history menu.

Messaging : To access the SMS menu.

Sound Recorder : To record the current communication.

Mute : To implement on-off settings. The local sound will not be sent while the Mute option is selected.

Volume : To adjust volume.

4 Contacts

There are 2 memory types: SIM card and phone. 300 entries for the phone, the capacity of SIM card is 250, the capacity of Group is 20.

In the main menu, press contacts icon to enter contacts.

You can choose the following functions in the contacts:

Add new contact: when the cursor on the “Add new contact” menu, press options key , you can add new contact to the SIM or phone. And There is a little difference on the saving format.

Quick Search: Allow you to view all records in the phone book. In this interface, you can enter through the name to find contacts. For the current number, you can View, Send text message, Call, Edit, Delete, Copy, Add to blacklist, Mark several, Groups, Phonebook settings, and so on.

Search contact: you can search the contacts by the name.

In the phonebook settings, there are Speed dial, Extra numbers, Memory status, Copy contacts, Move contacts, and Delete all contacts.

5 My File

In main menu, please press the My File icon to enter My File. It is used to manage the files, including pictures, videos, flashes and so on. There is 20KB space in the phone, and the space can be enlarged by the memory card. After enter “My File”, you can choose Open or Format or Details in the Options key.

Note: Some folders are hidden. To show them, you’ll have to save it to root directory of the handset with a right format, and move them to a corresponding folder.

6 Call History

6.1 Call history

In the Call history interface, there are such functions:

6.1.1 Missed calls : click any missed call and view the details as date, time, number, times and call end duration.

6.1.2 Dialed calls : the same as missed calls.

6.1.3 Received calls: the same as missed calls.

6.1.4 All calls : the all calls.

6.1.5 Delete call logs : You can either delete all call records or separated delete the missed, the dialed, the received and All calls.

6.2 Call settings

SIM1 /2 call settings:

Call waiting: You will be notified for a new call during the current one after this function is activated. For more information, contact your network provider.

Call divert: This service enables you to forward an incoming call of a certain business to the telephone number you specified. This service requires the support of the network. Contact your network supplier to open this service.

Allow you to select any one from Divert All Voice Calls (A forwarding icon displays at the status bar in standby mode after it is activated), Divert If Unreachable, Divert If No Answer, Divert If busy, and Divert All Data Calls. Then, the following options appear.

Advanced settings:

Blacklist numbers : Max 20 black numbers. when you set this function, each time you fail to get through, it will redial automatically.

Answer mode : There are tow mode to choose.

Auto call record : When the mobile phone calls, it will automatically recording the current communications if the user open the function.

7 Multimedia

7.1 Image viewer

The same as the Camera->Photos.

By selecting image viewer submenu, it's very convenient for you to view the photo list taken by the camera that are saved in the album.

For sending option, you can select to send photos to the wallpaper, to Bluetooth.

And you can choose the View, Send, Use as, Rename, Delete, Storage functions.

7.2 Video recorder

You can enter the video recorder through multimedia. After entering Multimedia, at the previewing status. Press options key to adjust parameter. Press OK key to begin recording video. Press  to stop

recording for a while, then press  to continue. Access the Video Recorder Submenu into the recording preview mode.

During preview, press Up/Down key to adjust the camera focal length.

Access “Option” for the following operations:

Camcorder settings: include the adjustment of white balance, exposure compensation, night mode, and Banding and operation contents.

Video settings: include the adjustment of video quality.

Storage: to have a choose of your phone or memory card.

7.3 Video player

During video playing, you can adjust the speed by long press left/right key, and to pause/continue by OK key. You can press “0”to switch full screen.

Select Video Player submenu to access movie list and you can access “Option” for the following operations:

Play : Shift from the player to Video player list to display the video files in the current list.

Send : the current video files could be sent to the phonebook and Bluetooth.

Rename : Change the name of the current video file.

Delete : Press it to delete the current video files.

Storage : to have a choose of your handset or memory card.

7.4 Audio player

In the interface of music broadcaster, use OK key to play or stop playing music; Use the volume key "*" and "#" to adjust volume; In the interface of music broadcaster, press “List” to access current play list of cell phone. In the Options menu, you can play the music file in the list, add music into the ring tone database, and set operations.

Specific settings in the setting options of a certain music file:

Pre. Playlist : Can choose memory card or phone.

Repeat : Allow you to set the repeat play mode of music, separately use Left/Right key to set it as OFF (No Repeated Play), repeat single music and repeat all.

Shuffle : set the play sequence, separately set as ON (Random Play) and OFF (play as per the current list sequence).

Background play : set On or Off.

7.5 Sound recorder

Press left soft key to access recording options.

New Record : You can record new recording.

Play : Allow you to play the current recording file.

List->Rename : Change the name of the current recording files.

List->Delete : Press it to delete the current recording files.

List->Use as : You can use as ringtone.

List->Send : the current recording files could be sent to Bluetooth.

Note: if there is an incoming call during record, the record will stop automatically, and the recorded content will be saved.

Note: please take photos, shooting and record legally.

7.6 FM radio

Allow you to access to FM broadcasting with your cell phone.

Channel list : After setting some channels, you can switch among them by pressing the numeric key.

Manual input : input the channel you want.

Auto search : Auto search the channels and set them as a list.

Settings : To set about background, handset speaker, record format and saving place.

Record : this phone supports recording FM radio.

File list : the files you recorded are stored in here.

8 Messaging

In main menu, press Messaging icon to enter messaging.

8.1 Write message

To write a message, you can follow the instructions:

Long press # key to switch the input methods.Editing a message, click "options" to go to the following options: Send to, input method, Advanced insert number and Save.

8.2 Inbox

You can check the messages you have received in the inbox and reply, call sender, forward, delete, copy or move to SIM or phone memory, use the number (dial out or save), and so on. If the inbox has no message, there will be a prompt "empty".

8.3 Drafts

You can check the messages you have saved in the draft box which is already sent or unsent and send, delete, edit, use number, copy to phone, move to phone, and so on.

8.4 Outbox

You can check the messages you have saved in the draft box which is already sent or unsent and send, delete, edit, use number, copy to phone, move to phone, and so on.

8.5 Sent message

You can check the messages you have saved in the outbox which is already delete, edit, forward, copy them to phone/SIM, move to phone/SIM, use number, and so on.

8.6 Delete messages

You can respectively delete all messages in inbox, outbox, sent messages, Drafts.

8.7 SMS settings

You have to make some basic settings before using the message function. There are the following options:

SIM1/2 : there are SMSC address, Delivery report, Reply path and Voicemail server.

Memory status : the memory status of the SIM card or the handset.

Text msg. counter : you can see SIM sent and SIM received.

Save sent messages : ON or OFF.

Preferred storage : SIM card or the phone.

Long text messages : Activated or Deactivate.

8.8 SMS Blacklist

You can edit phone number in the Blacklist Numbers. and then, the number which in the Blacklist can not send message to your phone.

9 Profiles

Several customized scene modes are provided to users, to choose the different mode for the different environment, such as General , Silent, Meeting and Outdoor type. and alert type, ring type, ringtone, ringtone

volume, message, message volume, keypad, keypad volume, System alert etc. could be adjust as needs.

10 Camera

Touch the left function key to go to the options interface as the followings:

- Switch to video recorder
- Photos
 - View : view the photos.
 - Send : send to Bluetooth.
 - Use as : To wallpaper .
 - Rename : rename the photos.
 - Delete : delete the selected photo.
 - Storage : to handset or memory card.
- Camera settings
 - Anti-flicker : 50Hz or 60Hz.
 - Scene mode : you can choose to auto mode or night mode.
 - White balance : There are 6 options to choose.
 - Delay timer : There are 4 options: off,5, 10,and 15 seconds.
- Image settings
 - Size : There are 3 options.240x320, 320x240, 640 x 480.
 - Image quality : There are 3 options. Low, normal, good.
- Storage : To phone or memory card.

11 Torch

User can choose ON to turn on the Torch light.

12 Bluetooth

This phone support Bluetooth function and can be connected with compatible Bluetooth equipment in the range of 10m from it. Since the equipment that support Bluetooth technique are communicated by radio, your phone does not have to face the Bluetooth directly. The wireless

connection of Bluetooth may be interfered by the obstacles or other electric equipment.

13 Settings

13.1 Dual SIM settings

There are 3 models: dual SIM open, only SIM1 open, only SIM2 open.

13.2 Phone settings

Time and date:

Set home city : choose time zone.

Set time/date : set the current time and date.

Set format : 12 hours or 24 hours.

Update with time zone : Allow you to set this function as ON or OFF.

Language : to choose a language for your phone.

Pref. input method : choose a default input method.

Display :

Wallpaper : you can change the picture of the Home screen.

Screen auto lock : you can select off,15s,30s,1min or 5min.

Show date and time : if you select On,the date and time will be showed in the home screen.

Show owner number : the phone can show your sim number.

Shortcuts : in the main menu, press the left key to enter shortcuts interface.

Dedicated key : Set the navigation key as the appointed function.

Auto update time : Allow you to set this function as ON or OFF or First confirm.

Flight mode : you can choose flight mode or normal mode. In the flight mode,you will could not call.

Misc. Settings : LCD backlight : you can set the brightness and time in the interface.

13.3 Security settings

SIM1/2 security : You can use PIN code to lock SIM card.

Phone security : You can lock the phone to avoid being illegally used.

Red key locks keypad : You can lock your phone by pressing red key.

Mobile tracker : When you change the SIM card,the phone will send a message to the Recipient number.

Privacy protection : When others want to enter Phonebook, messages, call history, multimedia, File manager. they should enter the password.

13.4 Network settings

SIM 1/2 Network selection : For the Selection Mode, you can switch between Manual and Automatic.

GPRS transfer pref. : User could choose SIM 1 network or SIM 2 network for setting.

13.5 Restore factory settings

In this menu, enter the phone password and press Ok. Then, the settings of corresponding parameters will be restored as default.

14 Organizer

14.1 Alarm

There are 5 alarm clocks for you to choose.In the alarm clock list, select one to set the following entries, On/Off, 00:00 (Time), Repeat, Snooze, and the Alert Type. The Repeat entry can be set as Once, Everyday, and Custom.

14.2 Calendar

In the menu, the screen displays the calendar for the current month and the actual date is marked with special color background. To view the date, press the Up/Down/Left/Right key. The calendar information refreshes upon your operation.

Jump to date: skip to the appointed date to check or edit the memo.

14.3 Calculator

The phone provides you with a calculator featuring basic functions.

To perform addition, subtraction, multiplication, and division, press corresponding direction key.

Note: This calculator features rounding error due to limited accuracy.

14.4 World clock

You can choose the world time by viewing time zone of every city. And then LCD will display the date and time of the corresponding city.

15 Fun&Games

In the menu, there is a small game "Ninja Climb". You can play the motion games on your phone. And you can set some settings in the Games settings.

16 USB funcyion

When the USB data-wire is in use, it will start the charging function at the same time. It is no need to install driver when under Windows XP systems; while you have to download the driver from the internet under Windows98/98SE systems.

There are 3 different functions of the USB data-wire in the handset:

Mass Storage : connecting the data-wire to the computer, If the phone is power on, USB setting will pop out, please choose the storage. If the phone is power off, there is no need to set the storage, computer will find the storage in phone automatically, and show the USB icon on computer. Open it and you can see and change the content.

Com port : connecting the data-wire to the computer, and then choosing "Sequence port", you can dial-up to the internet.

Note: this function needs network support, please contact network service supplier if possible.

17 Appendixes

17.1 Battery security

Please use the battery appointed by the factory. Using other parts will make all guarantees service invalid. The factory will take no responsibility for the damage caused by using non-original parts.

- The new battery can achieve the best performance only after two or

three complete charging and using.

- The battery can be charged for hundreds times, but it will become invalid at last. Please buy a new one when the idle time and talk time are apparently shortened.
- Please disconnect the charger with power supply when you do not use the charger. Do not connect the battery to the charger for more than a week, overcharge will shorten the battery life.
- Please do not put the battery together with metal.
- Please do not bend or open the battery.
- Please do not put the battery in water or fire.
- The battery can be charged when the environment approaches the room temperature, it possibly can't be charged when the temperature is -40°C or $+55^{\circ}\text{C}$.

17.2 Use and maintenance

This handset is high-technical product, please use it carefully. The following suggestion is for you to use and maintain the handset better.

- Put the handset in the place where the children can not reach.
- Please keep the handset dry. Rain, moisture and other liquid may contain the mineral material which will damage the circuit.
- Please do not put the handset in dirty and dusty place.
- Do not put the handset in too high temperature. High temperature may shorten the life of electronic setting and destroy the battery, and also distort or melt the plastic part.
- Do not put the handset in too low temperature. When moving the handset from low temperature to high, there will be moisture inside, this may destroy the PCB.
- Do not discharge the handset by yourself. Laypeople may destroy the setting.
- Please do not throw, knock on or shake the handset. Treating it roughly may destroy the main board.
- Please do not use excitant chemicals to clean the handset. Use the soft suds to clean it.
- Please do not paint the handset. Paint may interfere with the moving part and influence the normal operation.
- Please use the qualified spare antenna. The unauthorized antenna or other parts may destroy the handset.
- If the handset is wet, please power off and take the battery out. You can begin to use it again 24 hours later when you make sure it is dry.

- To lower the voice volume and shorten the backlight time is good to prolong the idle time.
- Please don't contact the charger interface with metal to avoid short circuit.

17.3 Basic trouble solutions

If you feel something wrong when using the handset, please refer to the following solutions. If you still can not solve it, please contact with the operator.

Regular problems	Reason	How to solve
Can not connect to the network when using wireless internet	The network service supplier don't supply this service or you haven't applied	Contact the network service operator
	Wrong setting	refer to the details of wireless internet
SIM card error	SIM damaged	Contact the wireless internet operator
	Not setup correctly	check SIM
	Filth on the SIM	Clean it with a cloth
Bad signal	The area is hard to receive signal, such as near a high building or in basement	Move to a better area
	Communication traffic	Try to avoid it
Can not power on	Battery used out	Change a battery
Can not make a call	Use barring dialing function	Cancel barring dialing function
Can not connect to network	SIM is invalid	Contact the operator
	Out of GSM service area	move into the service area
	Bad signal	Try again in a better signal area
Can not charge	The voltage is unsuitable	Use the appointed standard voltage
	Non-standard charger	Use the appointed charger
	not contact well	Check whether the plugs are well connected.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

This GSM/WCDMA Smartphone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: C1 (FCC ID: 2ADKW-LEAGOO-C1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.341 W/kg and when properly worn on the body is 0.461 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should

not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

IC

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radio électrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.